

Vitocell 100-E

Type SVPB-400-S1, SVPB-400-S2

Type SVPC-600-S1, SVPC-600-S2

Type SVPC-750-S1, SVPC-750-S2

Type SVPC-910-S1, SVPC-910-S2

Heating water buffer cylinder
400 to 910 l capacity

VITOCELL 100-E



Safety instructions



Please follow these safety instructions closely to prevent accidents and material losses.

Safety instructions explained



Danger

This symbol warns against the risk of injury.

Note

Details identified by the word "Note" contain additional information.



Please note

This symbol warns against the risk of material losses and environmental pollution.

Target group

These instructions are exclusively intended for authorised contractors.

- Work on electrical equipment may only be carried out by qualified electricians.
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

Regulations to be observed

- National installation regulations
- Statutory regulations for the prevention of accidents
- Statutory regulations for environmental protection
- Codes of practice of the relevant trade associations
- Relevant country-specific safety regulations

Working on the system

- Isolate the system from the power supply (e.g. at a separate fuse or main switch) and check that it is no longer live.
- Safeguard the system against reconnection.



Danger

Hot surfaces can cause burns.

- Before maintenance and service work, switch off the appliance and let it cool down.
- Do not touch the hot surfaces of uninsulated pipes and fittings.



Please note

Electronic assemblies can be damaged by electrostatic discharge. Before beginning work, touch earthed objects, such as heating or water pipes, to discharge any static.

Safety instructions (cont.)**Danger**

Floors that are wet or damp with water or glycol based liquids can cause injury due to slipping and falling.

- Keep the floor clean and dry during installation and maintenance work.
- Wear non-slip shoes.

**Danger**

Broken-off fragments of insulation material can cause death by suffocation if inhaled or swallowed.

- Do not let children play in the installation room.
- Keep the installation room clean after installation and maintenance work.

Operation of the system**Please note**

Unsuitable fill and top-up water increases the level of deposits and corrosion. This can reduce the output or cause damage to the system.

- Flush the heating system thoroughly before filling.
- Only fill with water of potable quality.
- Use only softened fill and top-up water complying with VDI 2035.

Repair work**Please note**

Repairing components that fulfil a safety function can compromise the safe operation of the system.

Faulty components must be replaced with original spare parts from the manufacturer.

Auxiliary components, spare and wearing parts

! Please note

- Auxiliary components, spare parts and wearing parts that have not been tested together with the system can compromise its function. Installing non-authorised components and making non-approved modifications or conversions can compromise safety and may limit the warranty.
For installation and replacement, use only original parts from the manufacturer or spare parts approved by the manufacturer.

Index

1. Information	Disposal of packaging	6
	Symbols	6
	Intended use	7
	Product information	7
	■ System examples	7
	■ Maintenance parts and spare parts	7
	Inspection and maintenance	8
2. Preparing for installation	Connections	9
3. Installation sequence	Installing the heating water buffer cylinder	10
	■ Adjustable feet	10
	■ Minimum clearances	10
	Fitting the lower thermal insulation mat and aligning the buffer cylinder	11
	Fitting the thermometer sensors (if supplied) and buffer temperature sensor	12
	Installing the buffer cylinder without Vitotrans	13
	■ Fitting the thermal insulation jacket	13
	■ Fitting the cover strips	14
	■ Fitting the top cover	14
	Installing the buffer cylinder with Vitotrans	15
	■ Installing the Vitotrans	15
	■ Fitting the thermal insulation jacket	16
	■ Fitting the cover strips	18
	■ Fitting the top cover	20
	Connections on the heating water side	20
	Connecting the equipotential bonding	21
4. Commissioning, inspection, maintenance	Steps - commissioning, inspection and maintenance	22
5. Commissioning/service reports		26
6. Specification		27
7. Disposal	Final decommissioning and disposal	29
8. Certificates	Declaration of conformity	30
9. Keyword index		31

Disposal of packaging

Please dispose of packaging waste in line with statutory regulations.

Symbols

Symbol	Meaning
	Reference to other document containing further information
	Step in a diagram: The numbers correspond to the order in which the steps are carried out.
	Warning of personal injury
	Warning of material losses and environmental pollution
	Live electrical area
	Pay particular attention.
	- Component must audibly click into place. - or - Acoustic signal
	- Fit new component. - or - In conjunction with a tool: Clean the surface.
	Dispose of component correctly.
	Dispose of component at a suitable collection point. Do not dispose of component in domestic waste.

The steps in connection with commissioning, inspection and maintenance are found in the "Commissioning, inspection and maintenance" section and identified as follows:

Symbol	Meaning
	Steps required during commissioning
	Not required during commissioning
	Steps required during inspection
	Not required during inspection
	Steps required during maintenance
	Not required during maintenance

Intended use

The appliance is intended to be installed and operated only in sealed unvented systems that comply with EN 12828/DIN 1988, or solar thermal systems that comply with EN 12977, with due attention paid to the associated installation, service and operating instructions. DHW cylinders are only designed to store and heat water of potable water quality. Buffer cylinders are exclusively designed to hold fill water of potable quality. Operate solar collectors only with heat transfer medium approved by the manufacturer.

Intended use presupposes that a fixed installation in conjunction with permissible, system-specific components has been carried out.

Commercial or industrial usage for a purpose other than heating the building or DHW shall be deemed inappropriate.

Any usage beyond this must be approved by the manufacturer for the individual case.

Incorrect usage or operation of the appliance (e.g. the appliance being opened by the system user) is prohibited and will result in an exclusion of liability.

Incorrect usage also occurs if the components in the system are modified from their intended use (e.g. through direct DHW heating in the collector).

Adhere to statutory regulations, especially concerning the hygiene of potable water.

Product information

The Vitocell 100-E, type SVPB and type SVPC are steel heating water buffer cylinders for storing heating water in systems compliant with EN 12828 and DIN 4753.

The heating water buffer cylinders can be connected to the following heat sources:

- Heat pumps
- Solar thermal systems

- Solid fuel boilers
- Heat recovery

The heating water buffer cylinders are available with either standard insulation or high efficiency insulation. The Vitotrans 353 freshwater module can be mounted directly on the heating water buffer cylinder for temperature-dependent stratification of the return.

System examples

Available system examples:


schematics.viessmann-climatesolutions.com

Maintenance parts and spare parts

Maintenance parts and spare parts can be identified and ordered directly online.

PartnerShop

Login:
shop.viessmann-climatesolutions.com

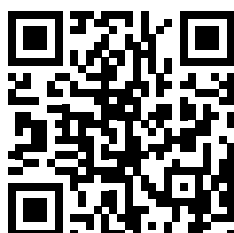

Spare part app

Web application

viparts.viessmann-climatesolutions.com

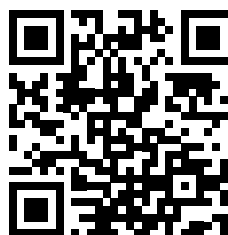


Fig. 1

Product information (cont.)


ViParts app




Inspection and maintenance

DIN 1988 requires a visual inspection and (if necessary) cleaning no later than 2 years after the cylinder has been commissioned, and thereafter according to requirements.

Connections

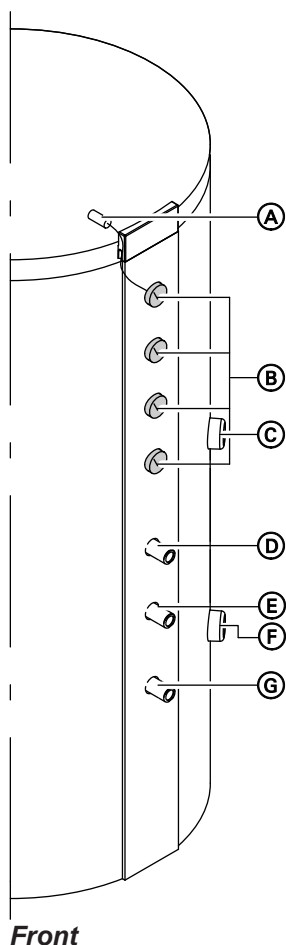

Front

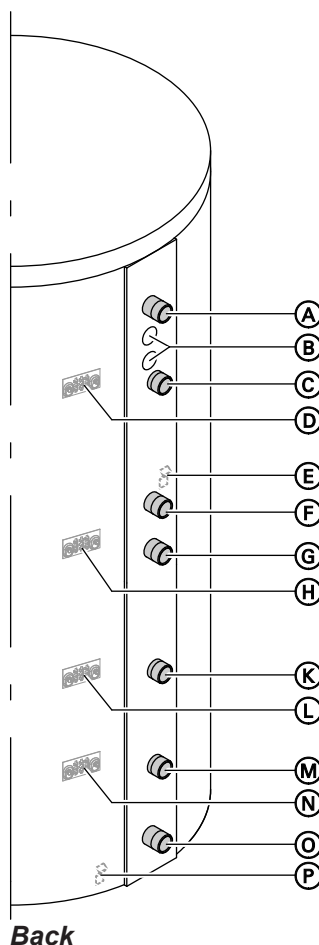

Back

- Ⓐ Thermometer sensor retainer (under the thermal insulation)
- Ⓑ Thermometer (accessories):
Up to 2 pce for 400 l and up to 4 pce for 600 l, 750 l and 910 l
- Ⓒ Sleeve for electric immersion heater
- Ⓓ Heating water flow G 1
- Ⓔ Return stratification G 1
- Ⓕ Sleeve for electric immersion heater
- Ⓖ Heating water return G 1
- Ⓐ Heating water flow 1/air vent valve
- Ⓑ Thermometer (accessories):
Up to 2 pce for 750 l and 910 l
- Ⓒ Heating water flow 2 (from the heat generator)
- Ⓓ Clamping device for buffer temperature sensor 1 (behind the thermal insulation)
- Ⓔ Thermometer sensor retainer (behind the thermal insulation)
- Ⓕ Heating water flow 3
- Ⓖ Heating water return 1
- Ⓖ Clamping device for buffer temperature sensor 2 and thermometer sensor (behind the thermal insulation)
- Ⓖ Heating water return 2 (from the heating circuits)
- Ⓖ Clamping device for buffer temperature sensor 3 and thermometer sensor (behind the thermal insulation)
- Ⓖ Heating water return 3 (from the heating circuits)
- Ⓖ Clamping device for buffer temperature sensor 4 (behind the thermal insulation)
- Ⓖ Heating water return 4 (to the heat generator)/drain
- Ⓖ Thermometer sensor retainer (behind the thermal insulation)

Installing the heating water buffer cylinder



Danger

Intense heat from a naked flame will melt the thermal insulation. The resulting vapours may be harmful to health. Prevent the thermal insulation from coming into contact with naked flames, e.g. from brazing and welding.



Please note

Frost and draughts can cause material damage to the heating water buffer cylinder.

- Only site the heating water buffer cylinder in frost-protected and draught-free rooms.
- When not in use, the heating water buffer cylinder must be drained if there is a risk of frost.

Placing the heating water buffer cylinder on a plinth will make the room easier to clean.

Adjustable feet

Note

Level the heating water buffer cylinder using only one or two of the adjustable feet. At least one of the adjustable feet must remain fully screwed in. Do **not** extend the adjustable feet beyond a total length of 35 mm.

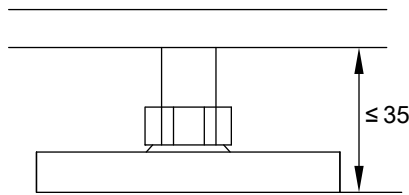


Fig. 2

Minimum clearances

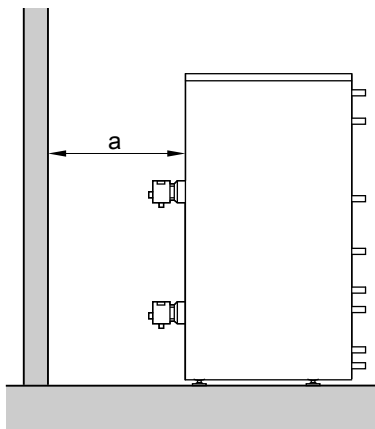


Fig. 3

Maintain minimum clearance a.

Minimum clearance for installation of an electric immersion heater EHE

Output of immersion heater EHE	Dimension a
3/6 kW	≥ 700 mm
9/12 kW	≥ 1000 mm

Electric immersion heater



Installation instructions for the electric immersion heater EHE

- Maintain the minimum clearances to the wall for maintenance work.
- Provide adequate clearance from the wall to allow for operation of the temperature controller (if installed).
- The unheated length of the electric immersion heater must be at least 100 mm.

Fitting the lower thermal insulation mat and aligning the buffer cylinder

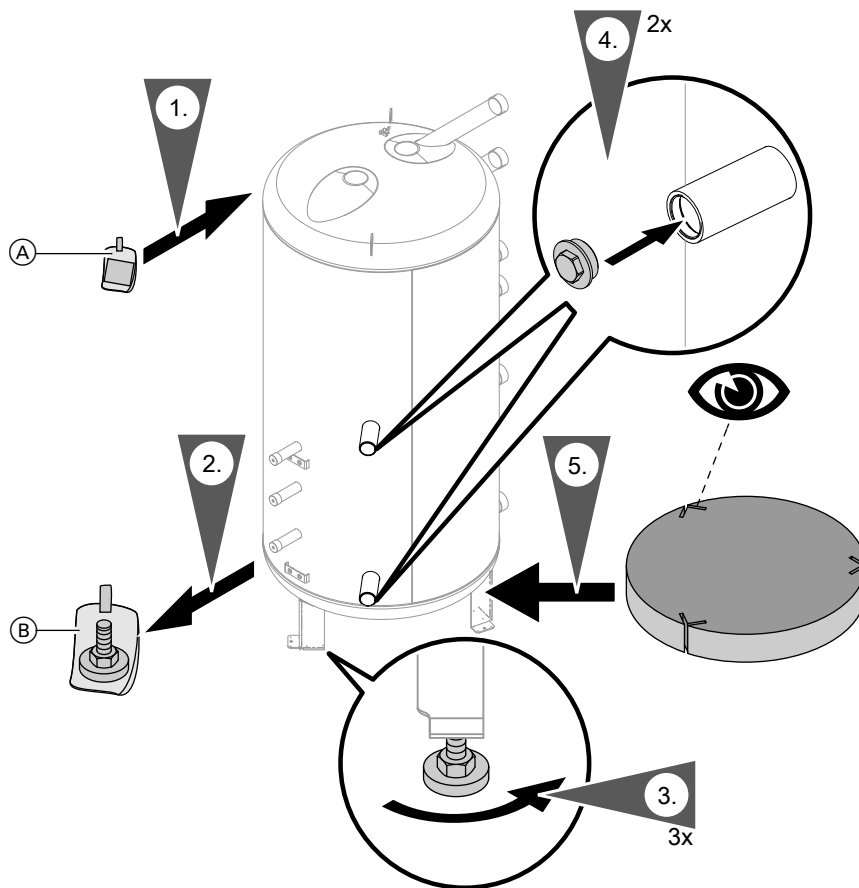


Fig. 4

- Ⓐ Bag with type plate and ErP label for type SVPB
- Ⓑ Bag with 3 adjustable feet for type SVPC

3. Only type SVPC:
Insert the adjustable feet into the legs as far as they will go, then adjust them to level the cylinder body: See page 10.
4. Seal any unused sleeves with the R 1½ plugs provided.

Fitting the thermometer sensors (if supplied) and buffer temperature sensor

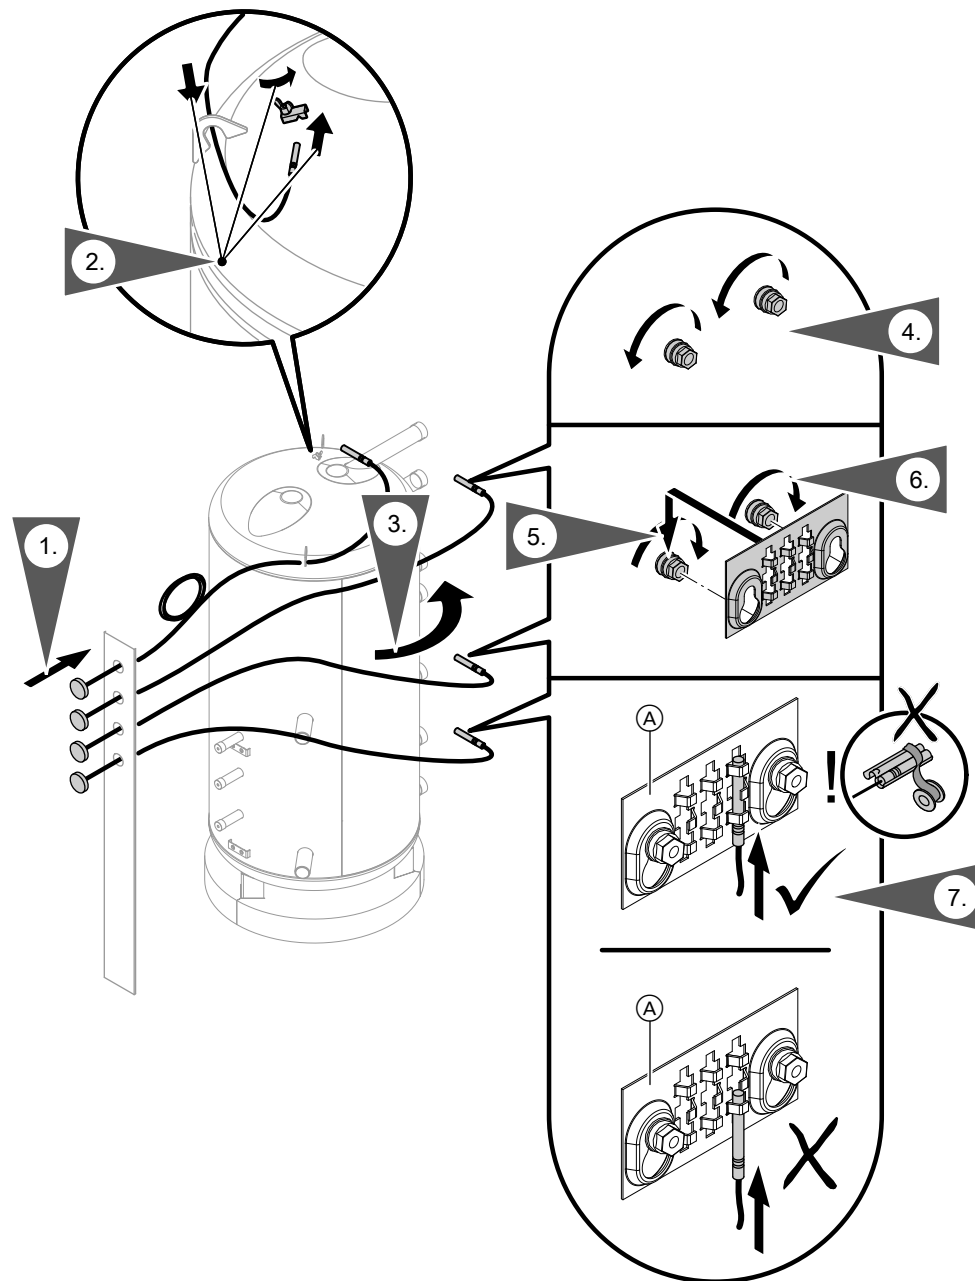


Fig. 5

1. Guide the thermometer sensors through the cover strip and insert the thermometers.
2. Route the upper thermometer sensor through the lifting eye, insert it into the clamping bracket as far as it will go and tighten the wing nut.
- Note**
The cover strip is held in its vertical position by the unwound capillaries. This is necessary for the rest of the installation.
3. Route the thermometer sensor capillaries to the back.
4. Undo the nuts.
5. Push the clamping device onto the threaded studs and align.
6. Tighten the nuts.
7. Depending on installation position: secure the **thermometer sensors** in the clamping bracket or push them into clamping devices (A) as far as they will go. Push the **buffer temperature sensor** as far as it will go into the clamping device.

Note

When the thermal insulation is being fitted, the buffer temperature sensor cables are routed outwards through the apertures (slots) in the rear cover strip.

Installing the buffer cylinder without Vitotrans

Fitting the thermal insulation jacket



Danger

Intense heat from a naked flame will melt the thermal insulation. The resulting vapours may be harmful to health. Prevent the thermal insulation from coming into contact with naked flames, e.g. when welding and brazing.



Please note

If fleece remnants from the thermal insulation get into the heating water buffer cylinder, they will contaminate the heating water and may result in operating faults.

- During installation, ensure that no fleece remnants enter the heating water buffer cylinder through the cylinder connections.
- Seal connections that are not required with caps.

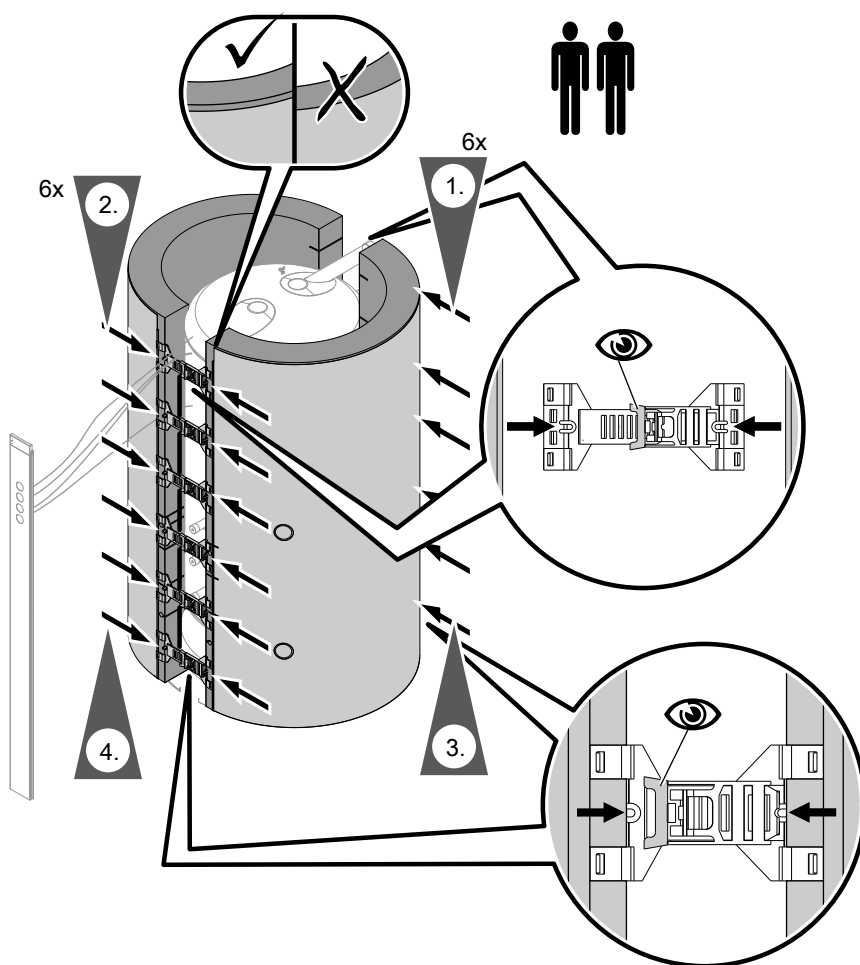


Fig. 6

1. Attach clip fasteners at the back of the cylinder to the edges of the right and left sections of the thermal insulation jacket. Leave the clip fasteners in the first notch. Place the thermal insulation jacket around the cylinder body.
2. Attach clip fasteners at the front of the cylinder to the edges of the right and left sections of the thermal insulation jacket. Leave the clip fasteners in the first notch.
3. Push the clip fasteners at the back of the cylinder as close together as possible.
4. Push the clip fasteners at the front of the cylinder as close together as possible.

Installing the buffer cylinder without Vitotrans (cont.)

Fitting the cover strips

1. Pat the thermal insulation jacket to fit it evenly around the cylinder body.
2. Fit the cover strip to the top of the cylinder.
3. Affix the cover strip to the side of the cylinder.
4. Affix the type plate.

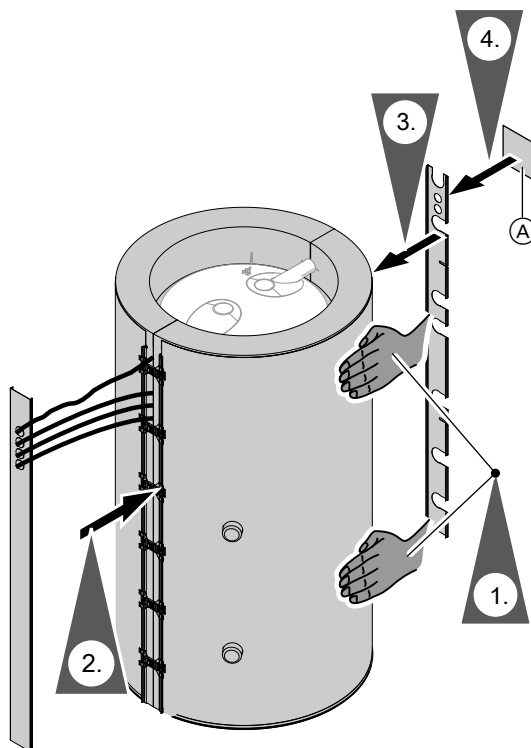


Fig. 7

Ⓐ Type plate

Fitting the top cover

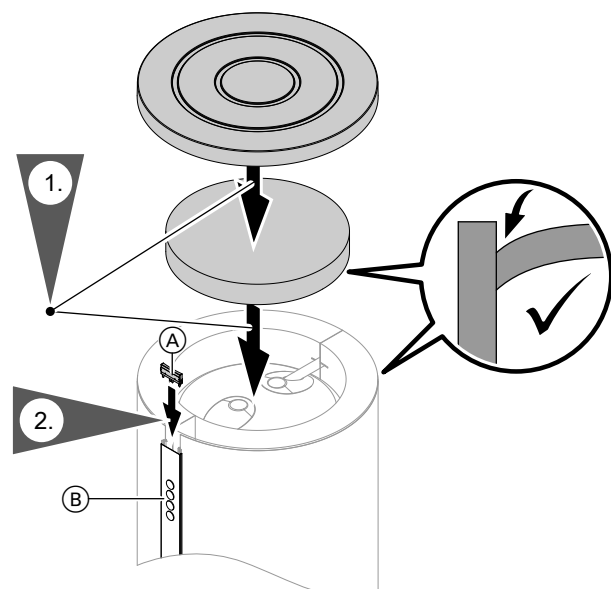


Fig. 8 Standard thermal insulation

Ⓐ Cap
Ⓑ Cover strip

Note

Slide the cover strip with the cap upwards until it meets with the top cover.

Installing the buffer cylinder with Vitotrans

Installing the Vitotrans

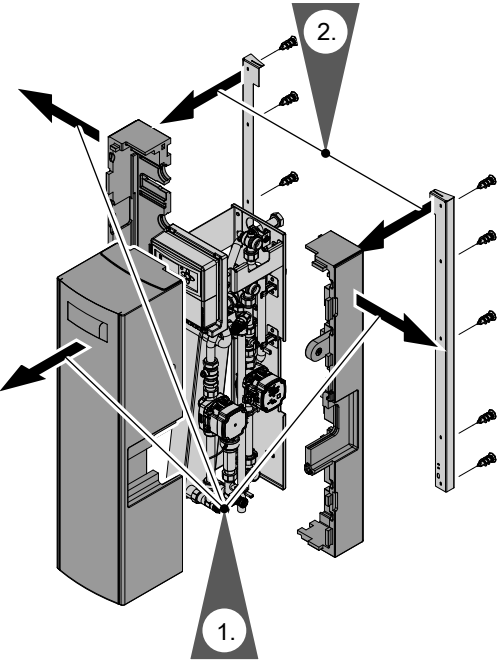


Fig. 9

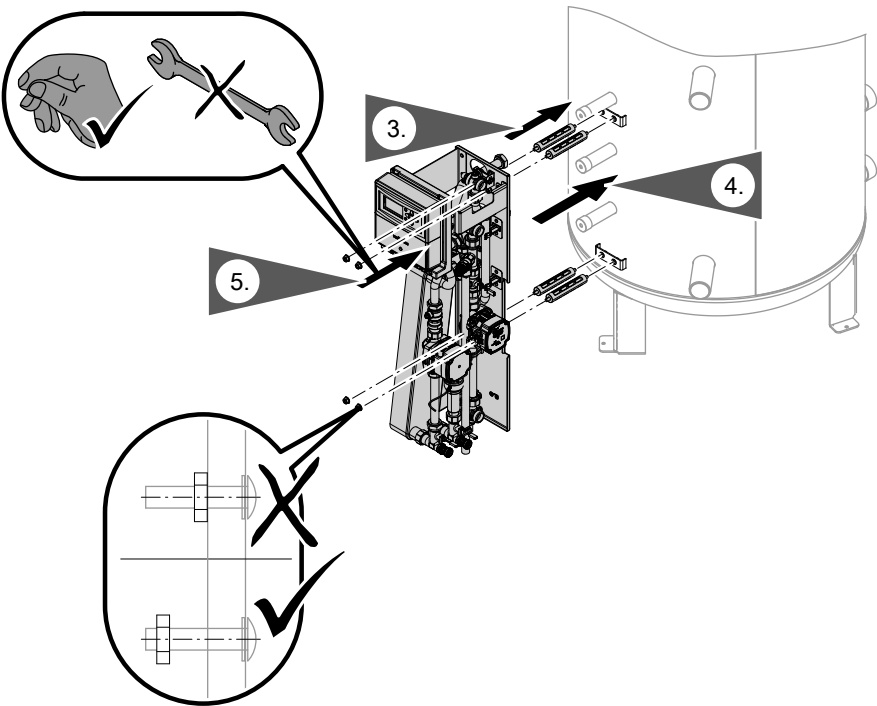


Fig. 10

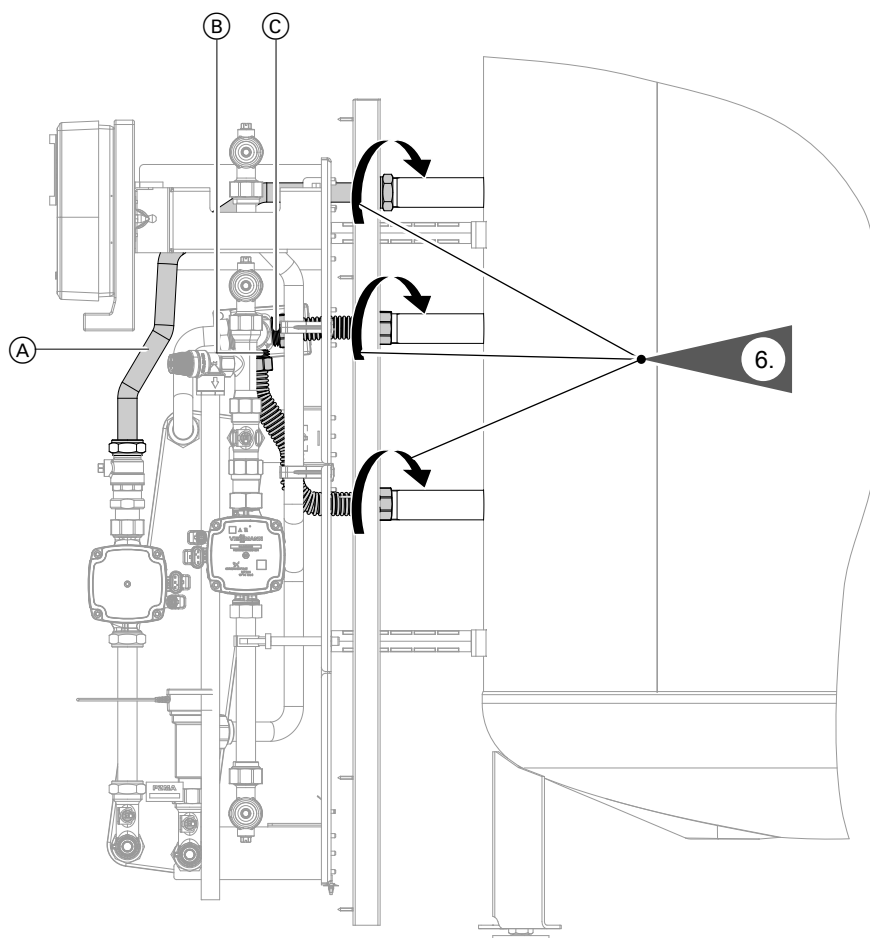


Fig. 11

- Ⓐ Heating water flow
- Ⓑ Heating water return
- Ⓒ Return stratification

Fitting the thermal insulation jacket



Danger

Intense heat from a naked flame will melt the thermal insulation. The resulting vapours may be harmful to health. Prevent the thermal insulation from coming into contact with naked flames, e.g. when welding and brazing.



Please note

If fleece remnants from the thermal insulation get into the heating water buffer cylinder, they will contaminate the heating water and may result in operating faults.

- During installation, ensure that no fleece remnants enter the heating water buffer cylinder through the cylinder connections.
- Seal connections that are not required with caps.

Installing the buffer cylinder with Vitotrans (cont.)

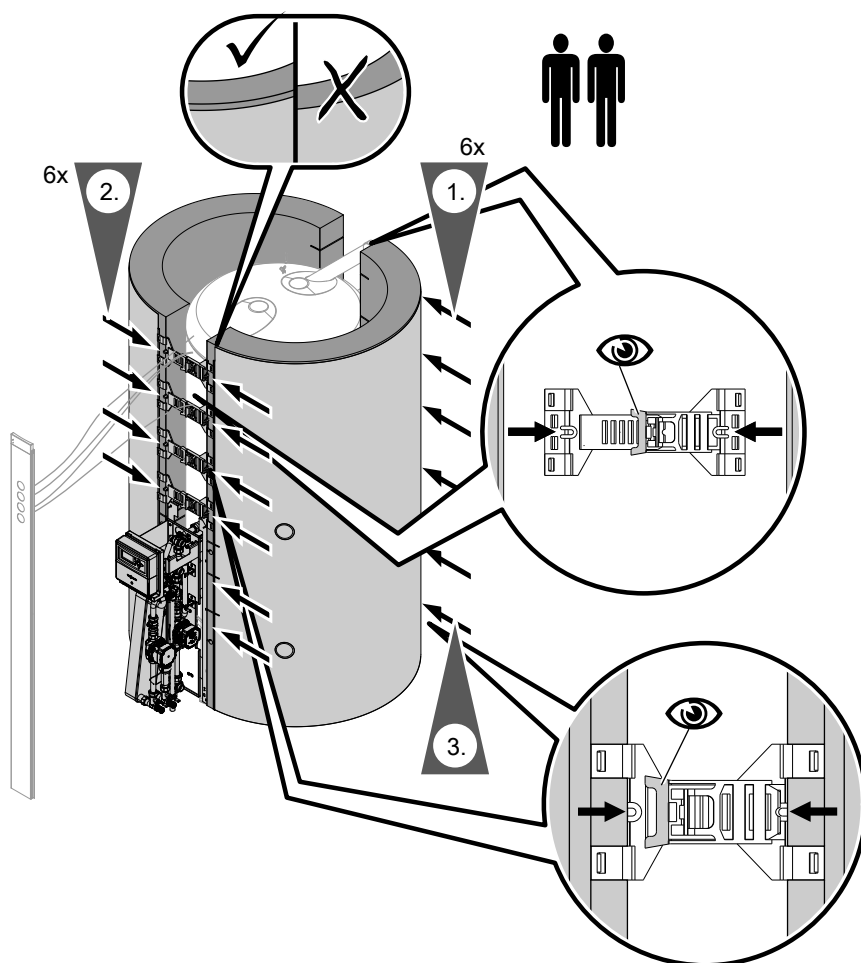


Fig. 12

1. Attach clip fasteners at the back of the cylinder to the edges of the right and left sections of the thermal insulation jacket. Leave the clip fasteners in the first notch. Place the thermal insulation jacket around the cylinder body.
2. Fit clip fasteners above and behind the Vitotrans so that they are evenly spaced. Leave the clip fasteners in the first notch. 2 clip fasteners behind the Vitotrans.
3. Push the clip fasteners as close together as possible.

Fitting the cover strips

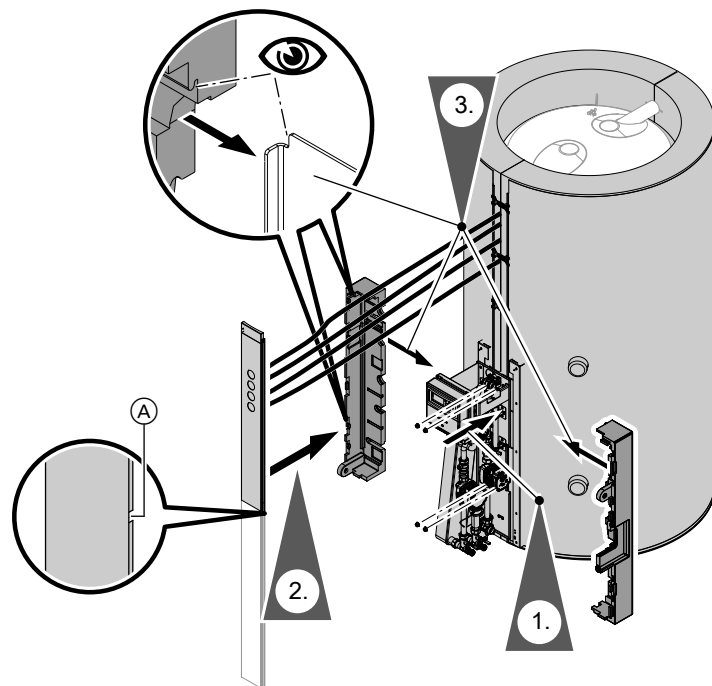


Fig. 13

1. Tighten the nuts on the bolts.
2. Fit the cover strip.
Separate the cover strip at slot (A) and fit the upper section.
3. Insert the rear sections of the Vitotrans thermal insulation. Observe the groove in the thermal insulation.

Installing the buffer cylinder with Vitotrans (cont.)

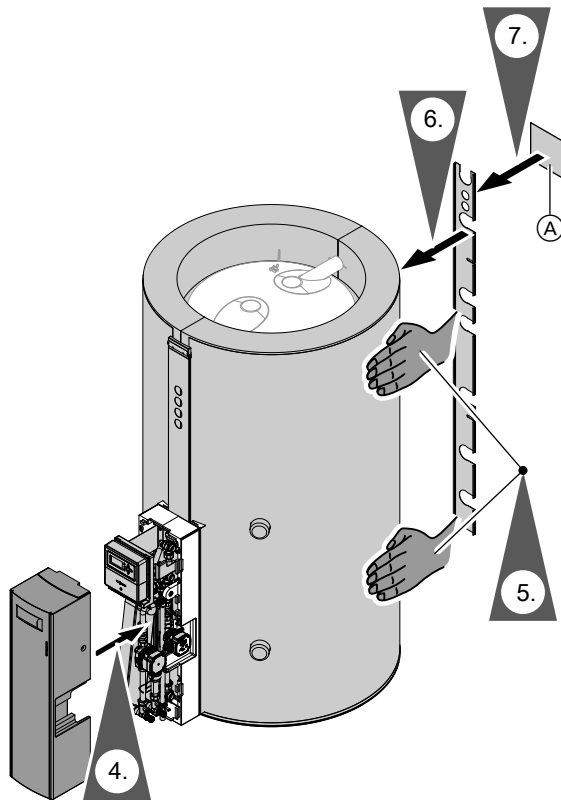


Fig. 14 Shown: Vitocell 100-E, type SVPC-750-S1,
type SVPC-750-S2

(A) Type plate

4. Fit the front section of the Vitotrans thermal insulation.
5. Push the buffer cylinder thermal insulation towards the front by patting it. This reduces the gap between the Vitotrans and the buffer cylinder.
6. Fit the rear cover strip to the thermal insulation.
7. Affix type plate (A).

Installing the buffer cylinder with Vitotrans (cont.)

Fitting the top cover

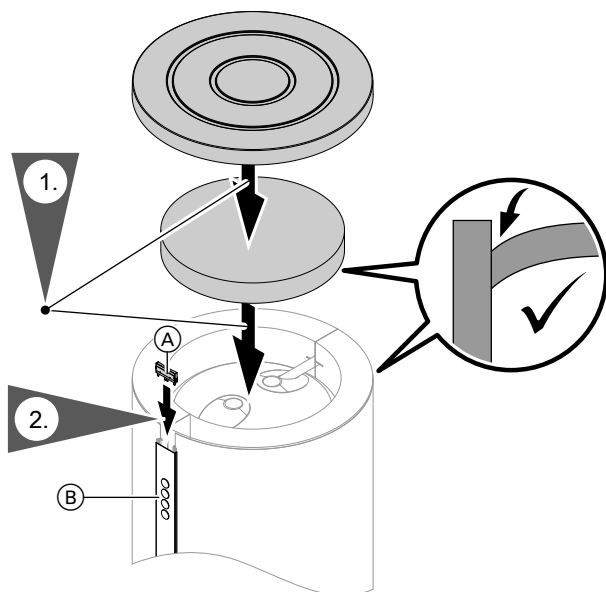


Fig. 15 Standard thermal insulation

Ⓐ Cap

Note

After fitting the top cover, slide the cover strip with the cap upwards until it meets with the top cover.

Connections on the heating water side

Any number of heating water buffer cylinders, type SVPB and type SVPC can be connected up in series or in parallel. Provide connection lines and air vent valves on site.



Danger

Intense heat from a naked flame will melt the thermal insulation. The resulting vapours may be harmful to health. Prevent the thermal insulation from coming into contact with naked flames, e.g. from brazing and welding.



Please note

Mechanically strained hydraulic connections lead to leaks.

- Connect hydraulic lines so that they are free of load and torque stress.
- Ensure that the gaskets are seated correctly.

Note

For position of flow and return connections: See chapter "Connections".

1. Connect all pipework with detachable fittings.
2. Install the flow line with a rise and fit an air vent valve at the highest point.
3. Check all connections for leaks after filling the buffer cylinder.

Connections on the heating water side (cont.)

Cylinder bank connected in series

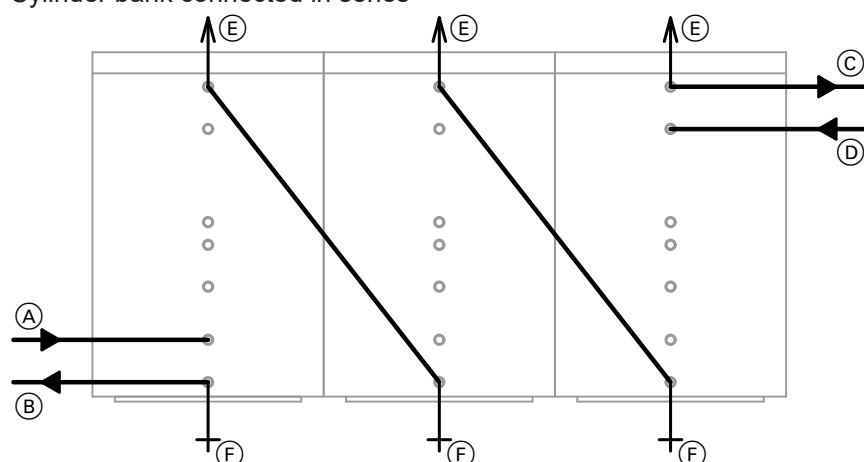


Fig. 16

- | | |
|--|--|
| (A) Heating water return 3 (from the heating circuits) | (D) Heating water flow 2 (from the heat generator) |
| (B) Heating water return 4 (to the heat generator) | (E) Air vent valve |
| (C) Heating water flow 1 (to the heating circuits) | (F) Drain |

Cylinder bank connected in parallel

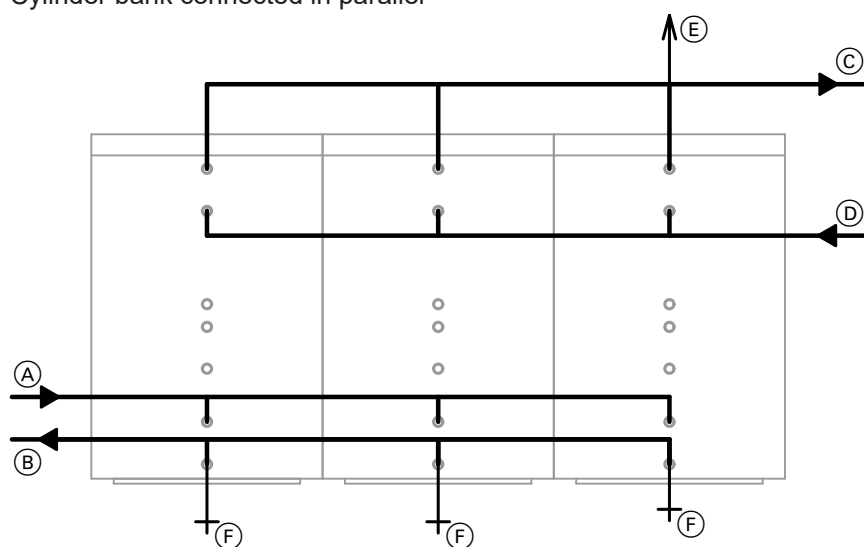


Fig. 17

- | | |
|--|--|
| (A) Heating water return 3 (from the heating circuits) | (D) Heating water flow 2 (from the heat generator) |
| (B) Heating water return 4 (to the heat generator) | (E) Air vent valve |
| (C) Heating water flow 1 (to the heating circuits) | (F) Drain |

Connecting the equipotential bonding

Connect the equipotential bonding in accordance with TAR low voltage (VDE-AR-N-4100) of the local power supply utility and VDE regulations.

Steps - commissioning, inspection and maintenance



Inspection steps

Page



Filling the heating water buffer cylinder

1. Only fill the heating water buffer cylinder with water of potable quality: See chapter "Fill and top-up water".
2. Check all connections for leaks. Test pressure: 9.6 bar (0.96 MPa).
If necessary re-seal the connections.
3. Check the function of the shut-off and safety equipment according to the manufacturer's instructions.



Please note

Excessively high operating temperatures can cause damage to the system. Adjust the temperature controller and the high limit safety cut-out so that the heating water temperature in the heating water buffer cylinder does not exceed 110 °C.

Operating data

Permissible operating temperature	110 °C
Permissible operating pressure	6 bar (0.6 MPa)
Test pressure	9.6 bar (0.96 MPa)

Fill and top-up water

The quality of the fill and top-up water is one of the key factors for preventing damage caused by deposits or corrosion in the heating system.

In order to prevent system damage, the European standards and national guidelines for fill and top-up water must be observed right from the design stage, e.g. VDI 2035.

- Regular checks of the appearance, water hardness, conductivity and pH value of the heating water during operation lead to higher operational reliability and system efficiency. These properties must also be observed for the top-up water. According to VDI 2035, the quantity and properties of the top-up water must always be documented in the system log or maintenance reports.
- The basis for filling the heating system is tap water of potable water quality in line with Directive 98/83/EC and/or (EU) 2020/2184. For use as heating water, it is normally sufficient to soften the tap water. VDI 2035 specifies the maximum recommended concentrations of alkaline earths (hardeners), depending on the heating output and the specific system volume (ratio of the heating output of the heat generators to the heating water volume of the system): See the table below.
- We recommend always softening the fill and top-up water, as the water hardness can vary due to the mixture of different sources of supply, and the information provided by water supply utilities only gives average values. The information provided by water supply utilities is not sufficient for designing the system. In addition, it must be taken into account that the quantity of top-up water that will be added to the system during its service life cannot be predicted precisely at the design stage (especially in the case of existing heating circuits).
- In systems with components containing aluminium, the heating water must be completely desalinated.
- The use of glycol as antifreeze without adequate inhibition and buffering is not permitted. The suitability of an antifreeze or other chemical additive should be certified by the manufacturer. Chemical additives in the heating water require more extensive monitoring and maintenance. Observe the manufacturer's instructions. Viessmann accepts no liability for damage or operating faults arising due to the use of unsuitable additives, incorrect dosing or poor maintenance.
- Chemical water treatments may only be planned and carried out by appropriately qualified specialist companies.





Total permissible hardness of the fill and top-up water according to VDI 2035

Total heating output of heat generator	Specific water capacity of heat generator ^{*1}	Specific system volume ^{*2}		
		≤ 20 l/kW	> 20 to ≤ 40 l/kW	> 40 l/kW
≤ 50 kW	≥ 0.3 l/kW	None	≤ 3.0 mol/m ³ (16.8 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)
	< 0.3 l/kW	≤ 3.0 mol/m ³ (16.8 °dH)	≤ 1.5 mol/m ³ (8.4 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)
> 50 to ≤ 200 kW	—	≤ 2.0 mol/m ³ (11.2 °dH)	≤ 1.0 mol/m ³ (5.6 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)
> 200 to ≤ 600 kW	—	≤ 1.5 mol/m ³ (8.4 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)
> 600 kW	—	≤ 0.05 mol/m ³ (0.3 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)	≤ 0.05 mol/m ³ (0.3 °dH)

Further requirements for the fill and top-up water independent of the heating output according to VDI 2035

Appearance

Clear, free of sedimented substances

Electrical conductivity

If the conductivity of the heating water is above **1500 µS/cm** due to a high salt content (e.g. in supply areas near the coast), desalination is necessary.

pH value

Materials in the system	pH value
Without aluminium alloys	8.2 to 10.0
With aluminium alloys	8.2 to 9.0

Information about system design

- For softening the heating water, use softening systems with water flow meters: See Vitaset pricelist.
- During installation, ensure that individual pipe sections can be drained separately. This avoids the need to drain all the heating water in the case of maintenance and repair work.
- As the formation of sludge and magnetite in the heating water cannot generally be completely prevented during operation, we recommend the installation of suitable magnetic dirt separators: See Vitaset pricelist.

Notes on commissioning and operating the system

- In order to prevent corrosion by remaining flushing water, fill the system completely immediately after flushing.
- Even treated fill water contains oxygen and small amounts of foreign matter. In order to prevent local concentrations of corrosion products and other deposits on the heating surfaces of the heat generator, commission the system in stages with a high heating water flow rate. Start with the heat generator at its lowest output. For the same reason, in the case of multi boiler systems and cascades, commission all heat generators at the same time.
- If extending the system or conducting maintenance or repair work, only drain the pipework sections where absolutely necessary.
- Check and clean filters, dirt traps and other blow-down or separating facilities in the heating water circuit after filling and commissioning.
- Special regional regulations regarding fill and top-up water must be observed. When disposing of heating water containing additives, check whether additional treatment may be required before it is discharged into the public waste water system.

^{*1} In the case of systems with several heat generators that have several different specific water capacities, the smallest specific water capacity is definitive.

^{*2} To calculate the specific system volume, the smallest individual heating output should be used for systems with several heat generators.



Checking the heating water buffer cylinder

Inspection and maintenance

DIN 1988 requires a visual inspection and (if necessary) cleaning no later than 2 years after the cylinder has been commissioned, and thereafter according to requirements.

As part of maintenance and inspection work on the overall system, we recommend carrying out the following checks on the heating water buffer cylinder. Rectify any defects found.

Visual check of the thermal insulation

- Check thermal insulation jacket for damage and moisture.
- Check thermal insulation caps for damage and moisture.

Visual check of the positioning

- Check that the heating water buffer cylinder is horizontally level.
- Check electrical cables for damage, e.g. sensor leads.

Shut-off valves

- Operate the shut-off valves on the flow and return connections.
- Operate the shut-off valves on the ventilation and drain connections.
- Check all shut-off valves for leaks and correct operation.



Draining the heating water buffer cylinder

1. Isolate electrical accessories (electric immersion heater, impressed current anode, etc.) from the power supply and safeguard against reconnection.
2. Close the cold water inlet and heating circuits.
3. If not present, attach drain hose to the drain valve and route to a suitable drain.
4. Open taps or air vent valve.
5. Open drain valve.



Instructing the system user

The installer should instruct the user in the operation of the system.

The system installer should also provide information on the required maintenance.

Commissioning/service reports

	Commissioning	Maintenance/service	Maintenance/service
Date:			
By:			

	Maintenance/service	Maintenance/service	Maintenance/service
Date:			
By:			

	Maintenance/service	Maintenance/service	Maintenance/service
Date:			
By:			

	Maintenance/service	Maintenance/service	Maintenance/service
Date:			
By:			

	Maintenance/service	Maintenance/service	Maintenance/service
Date:			
By:			

Specification

Vitocell 100-E	Type	SVPB-400		SVPC-600		SVPC-750		SVPC-910	
		-S1	-S2	-S1	-S2	-S1	-S2	-S1	-S2
Cylinder capacity	l	418		630.7		765.2		912.1	
Thermal insulation									
▪ Standard		X		X		X		X	
▪ High efficiency			X		X		X		X
Dimensions									
Length (Ø)									
▪ Incl. thermal insulation	mm	860		1065		1065		1065	
▪ Excl. thermal insulation	mm	650		790		790		790	
Width	mm	900		1110		1110		1110	
Height									
▪ Incl. thermal insulation	mm	1620		1645		1900		2200	
▪ Excl. thermal insulation	mm	1500		1535		1815		2120	
Height when tilted excl. thermal insulation and adjustable feet	mm	1520		1630		1890		2195	
Weight									
▪ Incl. thermal insulation	kg	105	111	115	135	135	153	155	180
▪ Excl. thermal insulation	kg	85		95		110		125	
Connections (male thread)									
Heating water flow and return	R	1 1/4		2		2		2	

**Full specifications**

"Vitocell 100-E" datasheet

Specification – electric immersion heater EHE

Electric immersion heater 6 kW

Rated output in standard mode	kW	2	4	6
Rated voltage		1/N/PE 230 V~/50 Hz	1/N/PE 230 V~/50 Hz	3/PE 400 V~/50 Hz
Rated current	A	8.7	17.4	8.7

Electric immersion heater 12 kW

Rated output in standard mode	kW	6	8	12
Rated voltage		2/PE 400 V~/50 Hz	2/PE 400 V~/50 Hz	3/PE 400 V~/50 Hz
Rated current	A	10.0	20.0	17.3

 Service instructions for the electric immersion heater EHE

Final decommissioning and disposal

This product can be recycled. Components and fluids from the system do not belong in ordinary domestic waste.

For decommissioning, isolate the system from the power supply, secure against reconnection and allow components to cool down where appropriate. All components must be disposed of correctly.

Declaration of conformity

We, Viessmann Climate Solutions GmbH & Co. KG, Viessmannstrasse 1, 35108 Allendorf (Eder), Germany, declare as sole responsible body that the named product complies with the European directives and supplementary national requirements in terms of its design and operational characteristics.

Using the serial number, the Declaration of Conformity can be found on the following website:

www.viessmann.co.uk/eu-conformity

Keyword index

A

Adjustable feet..... 11
Available system examples..... 7

B

Buffer cylinder installation..... 10

C

Conductivity..... 23
Connections..... 9
Connections, heating water side..... 20
Cylinder bank..... 21
Cylinder temperature sensor..... 12

D

Dirt separator..... 24
Dirt trap..... 24

E

Electrical conductivity..... 24
Electric immersion heater..... 10, 28

F

Fill water..... 23
Flushing water..... 24
Frost protection..... 23

H

Hardness..... 23
Heating water side connections..... 20

I

Intended use..... 7

M

Magnetite..... 24

O

Operating pressure, permissible..... 23

P

Permissible operating pressure..... 23
Permissible temperature..... 23
pH value..... 23, 24
Product information..... 7

S

Separating facility..... 24
Softening..... 24
Specification..... 27
– Electric immersion heater..... 28
Specific system volume..... 24
System examples..... 7

T

Temperature, permissible..... 23
Test pressure..... 23
Thermometer sensor..... 12
Top-up water..... 23

V

VDI 2035..... 23, 24
Vitotrans installation..... 15

W

Waste water system..... 24
Water hardness..... 23

Viessmann Climate Solutions SE
35108 Allendorf / Germany
A Carrier Company
Telephone: +49 6452 70-0
Fax: +49 6452 70-2780
www.viessmann.de



Viessmann Limited
A Carrier Company
Hortonwood 30, Telford
Shropshire, TF1 7YP, GB
Telephone: +44 1952 675000
Fax: +44 1952 675040
E-mail: info-uk@viessmann.com

6255542 Subject to technical modifications.